


# RS AutoLoad

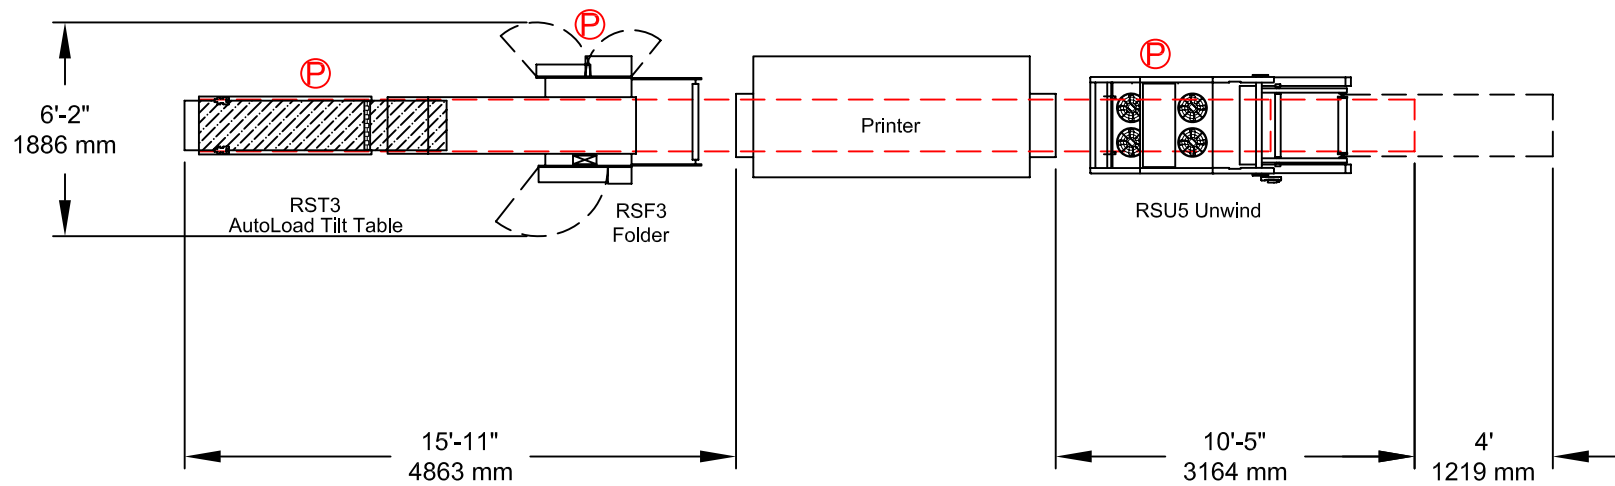

Ⓟ Power Location

--- Service Area

- - - Paper Path

This is the footprint for the standard, straight-line configuration of the RS AutoLoad. For a footprint of this configuration connected to a specific printer, please contact your Lasermax Roll Systems representative.